




INSTALLATION INSTRUCTIONS

PART No.

FB31117

Jeep® JK Wrangler
Logo Inner Fender Accent Plates

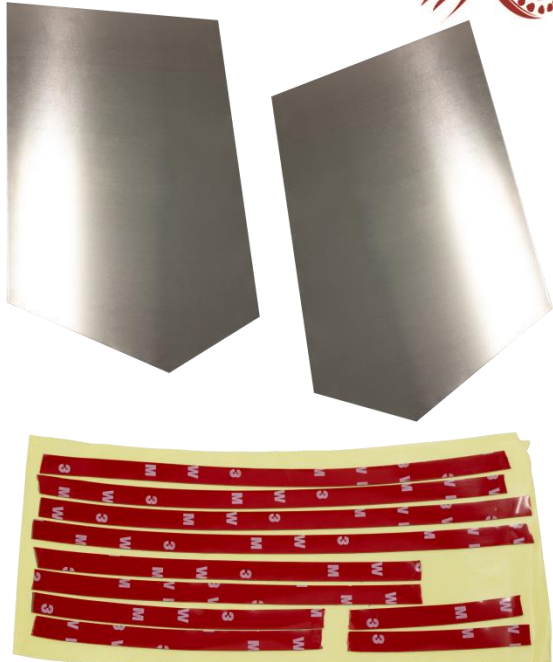

*Inner Fender NOT Included

REQUIRED TOOLS

*If inner fender is uninstalled:

- 1/4" Drill Bit
- 10MM Wrench
- 3MM Allen Key
- Paint

*If inner fender is installed:

- Paint

KIT CONTAINS

- RAW Aluminum Accent Plate
- Sheet of 3M Foam Adhesive Tape

QTY

- 2
- 1

NOTE: THIS PRODUCT IS EXCLUSIVE TO FISHBONE OFFROAD'S LOGO ALUMINUM INNER FENDERS, PART# FB33073

INSTALLATION INSTRUCTIONS

PART No.

FB31117

Jeep® JK Wrangler
Logo Inner Fender Accent Plates

1) PREPARE ACCENT PLATES

Begin coloring your Accent by first priming them, followed by painting them the color of your choice.




Ensure that the plates are lying down as shown below so that only the visible face is painted.



2) APPLY ADHESIVE

Place the adhesive strips around the boarder of the painted face. The tape provided is not cut to size and may need trimmed depending on how you decide to lay it out.

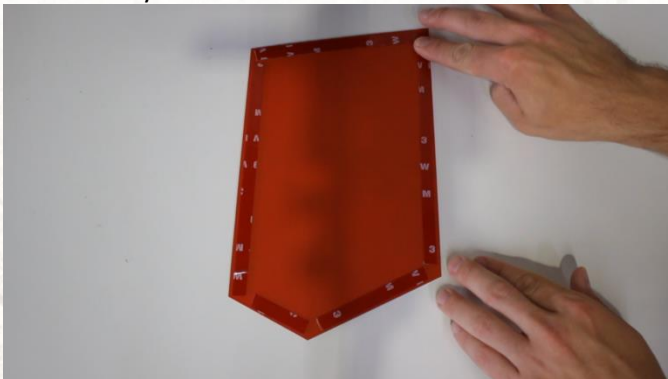

3) INSTALL PLATE

Remove the backings of the tape and firmly press the plate up against the backside of the corresponding Logo Inner Fender.



You may need to bow the aluminum back and forth to ensure the plate is adhered.

4) INSTALL/REINSTALL YOUR FENDER

Separate instructions are available for the installation of Fishbone Offroad's Aluminum Logo Inner Fenders on www.FishboneOffroad.com (Part# FB33073)

5) ENJOY YOUR NEW FISHBONE OFFROAD LOGO INNER FENDER ACCENT PLATES!